PAJR DESIGN

Montážní návod – Interiérový dekorativní štítek

1. Před nalepením si připravte přiložený čisticí kapesníček (3M) a ujistěte se, že povrch, na který budete štítek lepit, je suchý a bez prachu.
2. Očistěte plochu určenou pro nalepení. Roztrhněte obal kapesníčku, vyjměte jej a pečlivě očistěte a odmastěte vybranou oblast.
3. Nechte plochu oschnout. Po očištění počkejte několik vteřin, dokud nebude povrch zcela suchý.
4. Sejměte ochranný liner z oboustranné lepící pásky na zadní straně štítku.
5. Přiložte štítek na očištěné místo a pevně jej přitlačte po celé ploše, aby došlo k dokonalému přilnutí. Doporučujeme několik sekund přidržet tlakem.

Installation Instructions – Aluminum Badge

1. Before application, prepare the enclosed 3M cleaning wipe and make sure the surface where the badge will be applied is dry and free of dust.
2. Clean the surface thoroughly. Tear open the packet, remove the wipe, and use it to clean and degrease the selected area carefully.
3. Allow the surface to dry. Wait a few seconds until it is completely dry.
4. Remove the protective liner from the double-sided adhesive tape on the back of the badge.
5. Position the badge on the cleaned area and press firmly over the entire surface to ensure full adhesion. Hold it in place for a few seconds for the best result.

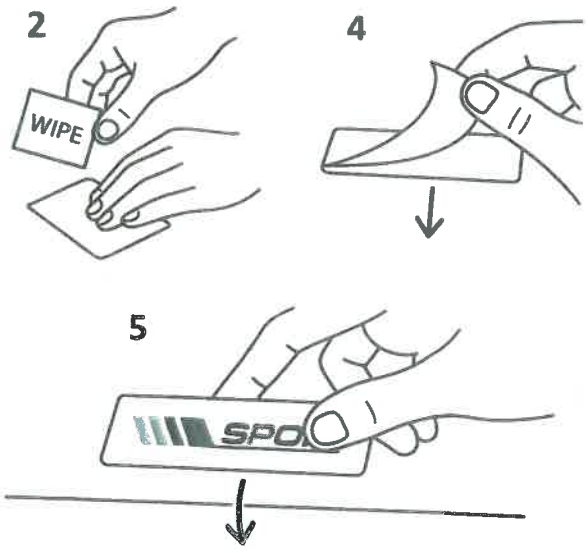

Thank you for choosing PajrDesign.
Designed with precision.
Made in the Czech Republic